

# Reliable isolation transformers from Tufvassons

Tufvassons have a wide range of transformers and over fifty years' experience of making them ourselves. We offer supreme quality isolation transformers for permanent installation, installation on DIN rails and movable variants that are connected by a mains lead. You can choose the product yourself, or ask our personnel to guide you to the right power supply.



## Optimum isolation, removes interference

Isolation transformers are used when you need to adjust one voltage level to another, or separate protective earth from system earth. It offers optimum isolation, minimises interference and is easy to install and inspect. Just like Tufvassons' other products, the isolation transformer is CE marked and protected against short circuits and overloading.

<b>Type:</b>	<b>PVM 301</b>						
<b>Part.no.:</b>	<b>6653-0014</b>						
<b>Input voltage:</b>	400V, 50-60 Hz.						
<b>Output voltage:</b>	230V with centre tap.						
<b>Rated power:</b>	260VA (1.1A)						
<b>Weight:</b>	3.9 kg						
<b>Encapsulation class:</b>	IP54						
<b>Insulation class:</b>	4.2 kV						
<b>Ambient temperature:</b>	max 40°C						
<b>Design:</b>	<ul style="list-style-type: none"> <li>- Transformer potted in hard-setting plastic, with grey encapsulation made from impact resistant, self extinguishing thermoplastics (V0).</li> <li>- Double insulated (earth connection not required).</li> <li>- Short circuit and overload protection, with secondary 2 x 1.25 A precision fuses.</li> <li>- Primary 2-pole terminal for up to 4 mm<sup>2</sup> cable, max torque 0.5 Nm.</li> <li>- Secondary 3-pole terminal for up to 4 mm<sup>2</sup> cable, max torque 0.5 Nm.</li> <li>- Secondary cable entry gland with 3 steps for cable max. dia. 14 mm.</li> <li>- Ducts for installation cable below the transformer.</li> </ul>						
<b>Installation:</b>	Wall installation, 3 screws, the upper 2 fixing holes are keyhole sockets.						
<b>Manufacturing standard:</b>	<table> <tr> <td>Security:</td> <td>EN 61558-1; EN 61558-2-4</td> </tr> <tr> <td>Emissions:</td> <td>EN 61 000-6-3; EN 61 000-6-4, IEC 62041</td> </tr> <tr> <td>Immunity:</td> <td>EN 61 000-6-1; EN 61 000-6-2, IEC 62041</td> </tr> </table>	Security:	EN 61558-1; EN 61558-2-4	Emissions:	EN 61 000-6-3; EN 61 000-6-4, IEC 62041	Immunity:	EN 61 000-6-1; EN 61 000-6-2, IEC 62041
Security:	EN 61558-1; EN 61558-2-4						
Emissions:	EN 61 000-6-3; EN 61 000-6-4, IEC 62041						
Immunity:	EN 61 000-6-1; EN 61 000-6-2, IEC 62041						
<b>Other information:</b>	If demanded by the installation regulations, the transformer must be connected by an all-pole switch in permanent installations.						





06/12




Tufvassons Transformator AB · Märstavägen 20 · 193 40 Sigtuna · Phone +46 (0) 8 594 809 00  
Fax +46 (0) 8 592 52 768 · E-mail reception@tufvassons.se · www.tufvassons.se

A company in the ADDTECH group.

## Wiring schedule and product illustration

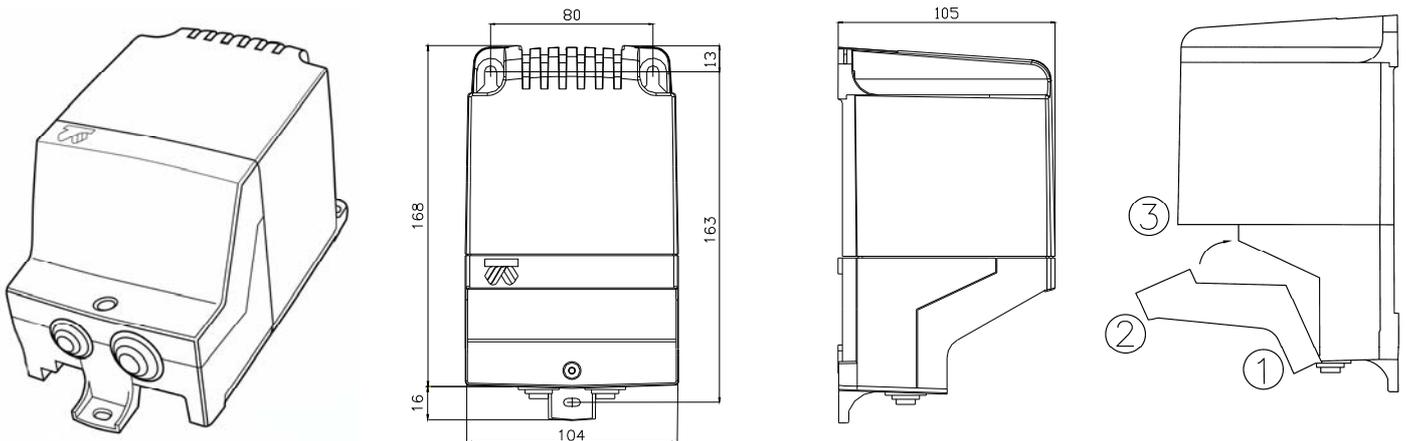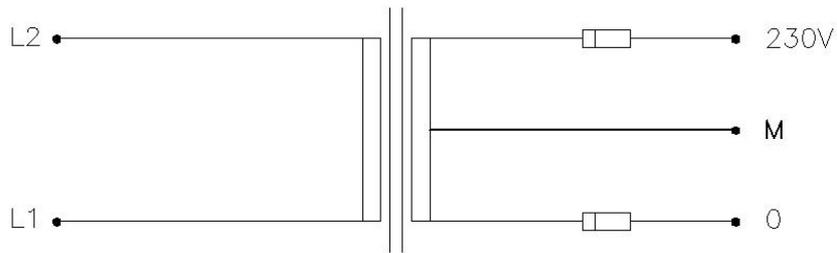

## Loading diagram

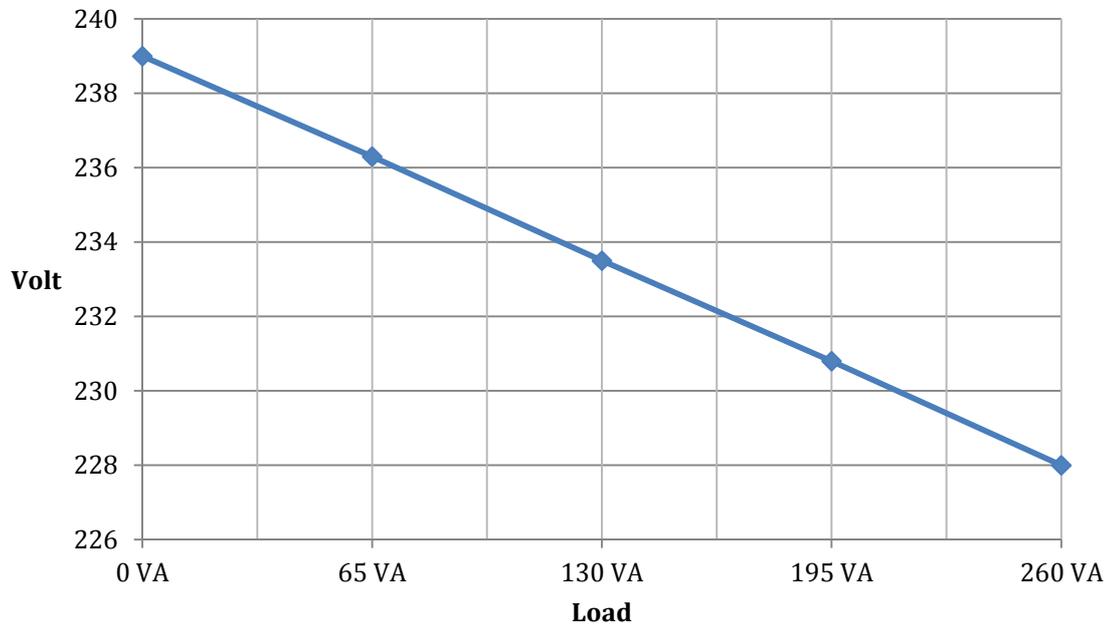

06/12

Tufvassons Transformator AB · Märstavägen 20 · 193 40 Sigtuna · Phone +46 (0) 8 594 809 00  
 Fax +46 (0) 8 592 52 768 · E-mail reception@tufvassons.se · www.tufvassons.se

A company in the ADDTECH group.